



INTERCHANGEABLE VALVE REMOVAL PROCESS: *3 STEP GUIDE*

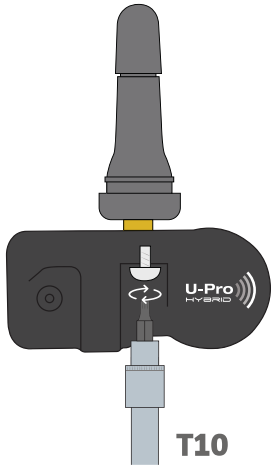


Step 1

Detach the **Snap-In** valve from the sensor body by removing the screw with a **T10** torx bit.

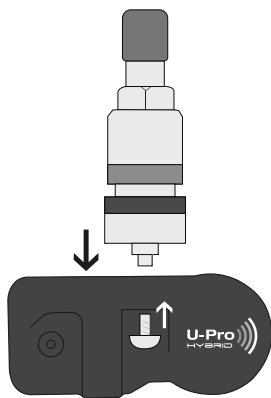

Step 2

Insert the **Clamp-In** valve into the sensor body, ensuring their flat surfaces are aligned.

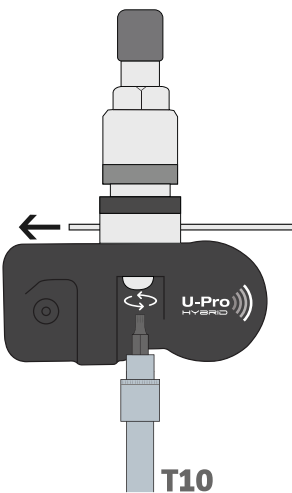

Step 3

Tighten the screw to **12.5 in-lbs** with a **T10** torx bit. To stop the valve from spinning, use an anti-rotation pin.