



# HOW TO: *COPY/CLONE* a TPMS Sensor ID using the PREM-H47 TPMS Scan Tool




## PREM-H47 TPMS SCAN TOOL FUNCTIONS




\*The information contained herein is accurate and reliable as of the date of publication; however, we do not assume any liability whatsoever for the accuracy and completeness of the above information.

**1**




From the main menu, select **PROGRAM SENSOR** and press **OK**.

**2**

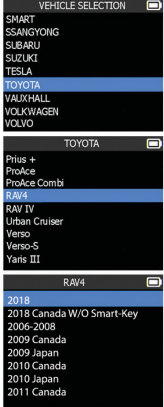


Select vehicle's **MAKE, MODEL** and **YEAR**.

**3**

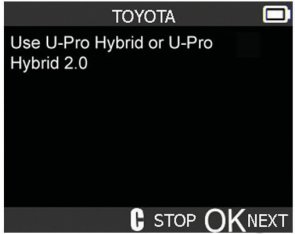

Select compatible **U-Pro Hybrid Sensor** and press **OK**.


**4**

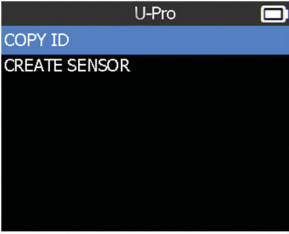

Select **COPY ID**.


**5**

Place the tool against the sidewall of the tire. The antenna should be pointed towards the sensor.

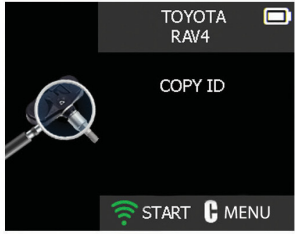

Press the **TRIGGER** button to read the sensor information.


**6**



The sensor information will display, press **OK** to continue.


**7**

Place the new sensor near the tool's antenna.



Press the **TRIGGER** button to read the sensor information.

**8**

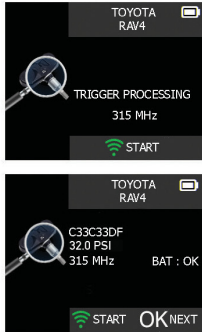

Please wait while the tool creates and verifies the new sensor ID.