



# HOW TO PROGRAM: **CREATE NEW** TPMS Sensor ID using the PREM-H47 TPMS Scan Tool



**1**




From the main menu, select **PROGRAM SENSOR** and press **OK**.

**2**




Select vehicle's **MAKE, MODEL** and **YEAR**.

**3**

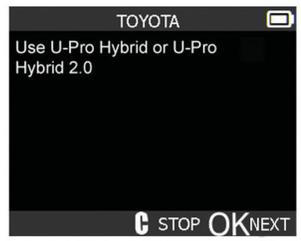


Select compatible **U-Pro Hybrid Sensor** and press **OK**.

**4**

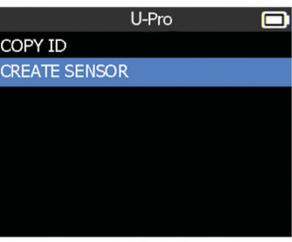

Select **CREATE SENSOR**.

**5**

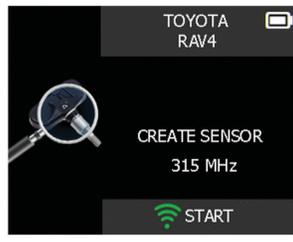

Hold the tool against the tire's sidewall in close vicinity of the sensor. Alternatively, if the sensor isn't in the tire, position the tool's antenna towards it, within 3-6 inches. Press the **TRIGGER** button to start.

**6**



**CONFIGURING** will show while the tool is creating a new ID.

**7**



Once complete, the new ID Number and **SUCCESSFUL** will be displayed. Press **OK** to finish.

## PREM-H47 TPMS SCAN TOOL FUNCTIONS



\*The information contained herein is accurate and reliable as of the date of publication; however, we do not assume any liability whatsoever for the accuracy and completeness of the above information.